

Stěrač FLAT MULTI

TABULKA POUŽITÍ

Orientační tabulka typů aut s odpovídající délkou originálních stěračů

ALFA ROMEO	L	P
33 Berlina (01/90–10/94)	10048 (450mm)	10048 (450mm)
33 Sport Wagon (90–94)	10048 (450mm)	10048 (450mm)
75 (87–93)	10048 (450mm)	10048 (450mm)
145 (04/97–12/00)	10052 (550mm)	10049 (480mm)
146 (04/97–12/00)	10052 (550mm)	10049 (480mm)
147 (11/00–06/05)	10052 (550mm)	10046 (410mm)
147 (04/05–)	10052 (550mm)	10046 (410mm)
155 (02/92–04/96)	10051 (530mm)	10049 (480mm)
156 Berlina (10/97–12/05)	10052 (550mm)	10050 (510mm)
156 Sport Wagon (00–05)	10052 (550mm)	10050 (510mm)
156 Cross Wag. Q4 (04–05)	10052 (550mm)	10050 (510mm)
159 Berlina (06/05–)	10053 (580mm)	10048 (450mm)
159 Berlina Q4 (01/06–)	10053 (580mm)	10048 (450mm)
159 Sport Wag. (03/06–)	10053 (580mm)	10049 (480mm)
159 Sport Wag. Q4 (03/06–)	10053 (580mm)	10048 (450mm)
164 (09/92–10/98)	10051 (530mm)	10051 (530mm)
166 (10/98–10/07)	10051 (530mm)	10049 (480mm)
Brera (01/06–)	10053 (580mm)	10048 (450mm)
GT (10/03–07/05)	10052 (550mm)	10046 (410mm)
GT (04/05–)	10052 (550mm)	10046 (410mm)
Mito (08/08–)	10055 (660mm)	10045 (380mm)
Spider (01/90–12/94)	10047 (430mm)	10047 (430mm)
Spider (03/06–)	10053 (580mm)	10048 (450mm)
Spider (86–)	10051 (530mm)	10051 (530mm)

AUDI	L	P
80 / 80 Avant (08/92–07/95)	10051 (530mm)	10050 (510mm)
90 (03/92–06/95)	10051 (530mm)	10051 (530mm)
100 / 100 Avant (12/90–07/94)	10052 (550mm)	10051 (530mm)
200 (–92)	10051 (530mm)	10051 (530mm)
A3 (09/96–06/03)	10051 (530mm)	10049 (480mm)
A3 (05/03–)	10054 (610mm)	10049 (480mm)
A3 Sportback (09/04–)	10054 (610mm)	10049 (480mm)
A4 / A4 Avant (11/94–09/01)	10051 (530mm)	10051 (530mm)
A4 / A4 Avant (11/03–06/08)	10052 (550mm)	10052 (550mm)
A4 / A4 Avant (04/08–)	10054 (610mm)	10050 (510mm)
A4 Cabriolet (04/02–03/09)	10052 (550mm)	10052 (550mm)
A5 Coupe (06/07–)	10054 (610mm)	10050 (510mm)
A5 Sportback (05/09–)	10054 (610mm)	10050 (510mm)
A6 / A6 Avant (06/94–05/01)	10052 (550mm)	10051 (530mm)
A6 / A6 Avant (06/01–)	10052 (550mm)	10052 (550mm)
A6 Avant Allroad (2001–)	10052 (550mm)	10052 (550mm)
A8 (06/94–09/02)	10052 (550mm)	10050 (510mm)
A8 Cabriolet (06/91–08/00)	10052 (550mm)	10051 (530mm)
Coupe (11/88–12/95)	10052 (550mm)	10051 (530mm)
Q5 (11/08–)	10054 (610mm)	10050 (510mm)
Q7 (03/06–)	10055 (660mm)	10054 (610mm)
Quattro (83–91)	10051 (530mm)	10051 (530mm)
RS4 (11/05–)	10052 (550mm)	10052 (550mm)
RS4 Avant (05/00–09/01)	10051 (530mm)	10051 (530mm)
RS4 Avant (05/06–)	10052 (550mm)	10052 (550mm)
RS4 Cabriolet (05/06–)	10052 (550mm)	10052 (550mm)
S2 Coupé (93–95)	10052 (550mm)	10052 (550mm)
S3 (08/98–06/03)	10051 (530mm)	10049 (480mm)
S3 (11/06–06/08)	10054 (610mm)	10049 (480mm)
S4 (07/92–07/94)	10052 (550mm)	10051 (530mm)
S4 (08/98–10/00)	10051 (530mm)	10051 (530mm)
S4 (03/03–06/08)	10052 (550mm)	10052 (550mm)
S4 Avant (10/97–09/01)	10051 (530mm)	10051 (530mm)
S4 Avant (11/03–12/04)	10052 (550mm)	10052 (550mm)
S4 Avant (11/04–)	10052 (550mm)	10052 (550mm)
S4 Cabriolet (02/04–)	10052 (550mm)	10052 (550mm)
S6 (06/94–05/01)	10052 (550mm)	10051 (530mm)
S6 (06/06–)	10052 (550mm)	10052 (550mm)
S6 Avant (06/94–05/01)	10052 (550mm)	10051 (530mm)
S6 Avant (06/06–)	10052 (550mm)	10052 (550mm)
S8 (09/96–09/02)	10052 (550mm)	10051 (530mm)
TT Coupe (07/98–09/03)	10052 (550mm)	10051 (530mm)
TT Coupe (10/03–06/06)	10051 (530mm)	10051 (530mm)
TT Coupe (07/06–)	10052 (550mm)	10051 (530mm)
TT Roadster (03/99–09/03)	10052 (550mm)	10051 (530mm)
TT Roadster (10/03–06/06)	10051 (530mm)	10051 (530mm)
TT Roadster (02/07–)	10052 (550mm)	10051 (530mm)
V8 (91–94)	10052 (550mm)	10052 (550mm)

AUSTIN	L	P
Maestro (83–94)	10050 (510mm)	10050 (510mm)
Metro (83–97)	10046 (410mm)	10046 (410mm)

BMW	L	P
Serie 1 (09/04–)	10050 (510mm)	10050 (510mm)
Serie 1 Cabrio (03/08–)	10050 (510mm)	10050 (510mm)
Serie 1 Coupe (10/07–)	10050 (510mm)	10050 (510mm)
Serie 3 (09/90–12/98)	10051 (530mm)	10050 (510mm)
Serie 3 (04/98–03/05)	10052 (550mm)	10049 (480mm)
Serie 3 (03/05–)	10054 (610mm)	10049 (480mm)
Serie 3 Cabrio (93–99)	10051 (530mm)	10050 (510mm)
Serie 3 Cabrio (00–06)	10052 (550mm)	10049 (480mm)
Serie 3 Cabrio (09/06–)	10054 (610mm)	10048 (450mm)

pokračování ➔

BMW	L	P
☛ pokračování		
Serie 3 Compact (94–00)	10050 (510mm)	10049 (480mm)
Serie 3 Compact (01–04)	10052 (550mm)	10049 (480mm)
Serie 3 Coupe (91–99)	10051 (530mm)	10050 (510mm)
Serie 3 Coupe (98–06)	10052 (550mm)	10049 (480mm)
Serie 3 Coupe (09/06–)	10054 (610mm)	10048 (450mm)
Serie 3 Touring (89–94)	10050 (510mm)	10050 (510mm)
Serie 3 Touring (95–99)	10051 (530mm)	10050 (510mm)
Serie 3 Touring (99–05)	10052 (550mm)	10049 (480mm)
Serie 3 Touring (09/05–)	10054 (610mm)	10049 (480mm)
Serie 5 (09/89–12/95)	10054 (610mm)	10054 (610mm)
Serie 5 (09/95–07/03)	10055 (660mm)	10052 (550mm)
Serie 5 (07/03–)	10054 (610mm)	10053 (580mm)
Serie 5 Touring (91–96)	10054 (610mm)	10054 (610mm)
Serie 5 Touring (96–04)	10055 (660mm)	10052 (550mm)
Serie 5 Touring (05/04–)	10054 (610mm)	10053 (580mm)
Serie 6 (01/04–)	10054 (610mm)	10053 (580mm)
Serie 6 Cabrio (04/04–)	10054 (610mm)	10053 (580mm)
Serie 7 (09/86–10/94)	10054 (610mm)	10054 (610mm)
Serie 7 (06/94–12/01)	10054 (610mm)	
Serie 8 (07/89–12/99)	10054 (610mm)	10054 (610mm)
Serie M (03/92–12/95)	10054 (610mm)	10054 (610mm)
Serie M (01/94–12/97)	10051 (530mm)	10050 (510mm)
Serie M (10/98–07/03)	10055 (660mm)	10052 (550mm)
Serie M (11/04–)	10054 (610mm)	10053 (580mm)
Serie M Cabrio (94–99)	10051 (530mm)	10050 (510mm)
Serie M Cabrio (01–06)	10052 (550mm)	10049 (480mm)
Serie M Cabrio (11/06–)	10054 (610mm)	10053 (580mm)
Serie M Cabrio (03/08–)	10054 (610mm)	10048 (450mm)
Serie M Coupe (92–98)	10051 (530mm)	10050 (510mm)
Serie M Coupe (00–06)	10052 (550mm)	10049 (480mm)
Serie M Coupe (05/07–)	10054 (610mm)	10048 (450mm)
Serie M Touring (92–95)	10054 (610mm)	10054 (610mm)
X3 (01/04–)	10052 (550mm)	10050 (510mm)
X5 (03/99–10/06)	10054 (610mm)	10051 (530mm)
X5 (11/06–)	10054 (610mm)	10050 (510mm)
X6 (03/08–)	10054 (610mm)	10050 (510mm)
Z1 (–98)	10050 (510mm)	10050 (510mm)
Z3 (03/95–09/02)	10050 (510mm)	10049 (480mm)
Z3 Coupe (09/97–06/02)	10050 (510mm)	10049 (480mm)
Z4 (10/02–07/07)	10051 (530mm)	10050 (510mm)
Z4 Coupe (03/06–07/07)	10051 (530mm)	10050 (510mm)
Z8 (–03)	10051 (530mm)	10051 (530mm)

CADILLAC	L	P
BLS (10/05–)	10053 (580mm)	10053 (580mm)
BLS (02/08–)	10054 (610mm)	10053 (580mm)
BLS Wagon (02/08–)	10054 (610mm)	10053 (580mm)
Catera (10/96–12/01)	10054 (610mm)	10049 (480mm)
CTS (09/07–)	10052 (550mm)	10049 (480mm)
SRX (09/03–)	10052 (550mm)	10050 (510mm)
STS (09/04–)	10052 (550mm)	10051 (530mm)
XLR (09/03–)	10050 (510mm)	10050 (510mm)

CITROËN	L	P
AX (06/90–12/98)	10052 (550mm)	
Berlingo (07/96–11/02)	10052 (550mm)	10051 (530mm)
Berlingo (11/02–)	10052 (550mm)	10051 (530mm)
Berlingo (05/08–)	10055 (660mm)	10046 (410mm)
BX (07/85–12/94)	10050 (510mm)	
C15 (07/87–12/05)	10048 (450mm)	
C15 (07/86–05/00)	10048 (450mm)	
C25 (81–94)	10050 (510mm)	10050 (510mm)
C1 (06/05–)	10055 (660mm)	
C2 (09/03–)	10054 (610mm)	10048 (450mm)
C3 (01/02–)	10054 (610mm)	10048 (450mm)
C3 Picasso (02/09–)	10054 (610mm)	10046 (410mm)
C3-Pluriel (05/03–)	10051 (530mm)	10048 (450mm)
C4 (11/04–)	10056 (710mm)	10054 (610mm)
C4 Coupe (11/04–)	10056 (710mm)	10054 (610mm)
C5 (03/01–11/03)	10055 (660mm)	10048 (450mm)
C5 (12/03–03/08)	10055 (660mm)	10049 (480mm)
C5 (04/08–)	10056 (710mm)	10052 (550mm)
C5 Break (06/01–11/03)	10055 (660mm)	10048 (450mm)
C5 Break (12/03–03/08)	10055 (660mm)	10049 (480mm)
C5 Tourer (04/08–)	10056 (710mm)	10052 (550mm)
C6 (11/05–)	10056 (710mm)	10056 (710mm)
C8 (06/02–07/05)	10055 (660mm)	10055 (660mm)
C8 (08/05–)	10055 (660mm)	10055 (660mm)
C-Crosser (09/07–)	10054 (610mm)	10051 (530mm)
CX, CX Break (74–91)	10054 (610mm)	
Evasion (06/94–07/02)	10055 (660mm)	10050 (510mm)
Jumper (02/94–02/02)	10052 (550mm)	10051 (530mm)
Jumper (02/02–)	10052 (550mm)	10051 (530mm)
Jumper (06/06–)	10055 (660mm)	10051 (530mm)
Jumpy (10/95–)	10055 (660mm)	10048 (450mm)
Jumpy (02/07–)	10055 (660mm)	10050 (510mm)
Nemo (02/08–)	10055 (660mm)	10049 (480mm)
Saxo (02/96–09/03)	10049 (480mm)	10047 (430mm)

pokračování ➔

CITROËN	L	P
☛ pokračování		
Xantia (03/93–12/01)	10054 (610mm)	10050 (510mm)
Xantia Break (09/95–12/01)	10054 (610mm)	10050 (510mm)
XM (05/89–10/00)	10052 (550mm)	10052 (550mm)
Xsara (07/97–)	10052 (550mm)	10050 (510mm)
Xsara Break (10/97–08/00)	10052 (550mm)	10050 (510mm)
Xsara Coupe (07/97–)	10052 (550mm)	10050 (510mm)
Xsara Picasso (01/00–09/05)	10055 (660mm)	10055 (660mm)
Xsara Picasso (10/05–)	10055 (660mm)	10055 (660mm)
ZX (03/91–02/98)	10052 (550mm)	

DACIA	L	P
1300, 1310 (77–04)	10045 (380mm)	10045 (380mm)
Logan (07/04–)	10050 (510mm)	10050 (510mm)
Logan MCV (01/07–)	10050 (510mm)	10049 (480mm)
Nova (05/96–09/00)	10050 (510mm)	10050 (510mm)
Sandero (06/08–)	10050 (510mm)	10049 (480mm)
Serie 1000 (01/79–06/04)	10046 (410mm)	10046 (410mm)
Solenza (04/03–04/05)	10048 (450mm)	10048 (450mm)
SuperNova (10/00–09/03)	10050 (510mm)	10050 (510mm)

DAEWOO

viz sekce CHEVROLET / DAEWOO

DAIHATSU	L	P
Applause (90–96)	10048 (450mm)	10048 (450mm)
Copen (02–)	10048 (450mm)	10046 (410mm)
Cuore (08/94–12/99)	10046 (410mm)	10046 (410mm)
Cuore (10/98–03/03)	10046 (410mm)	10045 (380mm)
Cuore (03/03–)	10051 (530mm)	10041 (280mm)
Gran Move (11/96–07/02)	10051 (530mm)	10049 (480mm)
Hi Jet (95–)	10046 (410mm)	10045 (380mm)
Charade (05/93–08/03)	10049 (480mm)	10047 (430mm)
Charade Hatchb. (93–00)	10049 (480mm)	10047 (430mm)
Materia (09/06–)	10050 (510mm)	10049 (480mm)
Move (08/95–09/02)	10046 (410mm)	10045 (380mm)
Rocky (03/93–03/02)	10046 (410mm)	10046 (410mm)
Sirion (01/99–)	10048 (450mm)	10048 (450mm)
Sirion II (04/98–07/04)	10049 (480mm)	10047 (430mm)
Sirion II (10/04–)	10050 (510mm)	10046 (410mm)
Terios (01/06–)	10051 (530mm)	10048 (450mm)
Travis (08/06–)	10050 (510mm)	10046 (410mm)

DODGE	L	P
Avenger (01/07–)	10054 (610mm)	10051 (530mm)
Caliber (01/06–)	10054 (610mm)	10046 (410mm)
Caliber (01/06–)	10054 (610mm)	10046 (410mm)
Caravan (01/95–08/03)	10055 (660mm)	10055 (660mm)
Journey (03/08–)	10054 (610mm)	10048 (450mm)
Magnum (01/05–)	10052 (550mm)	10051 (530mm)
Nitro (01/07–)	10049 (480mm)	10049 (480mm)

FERRARI	L	P
Mondial (80–93)	10048 (450mm)	10048 (450mm)
Testarossa (84–96)	10050 (510mm)	10050 (510mm)

FIAT	 L	 P
126 (09/87–09/00)	10043 (330mm)	10043 (330mm)
500 (07/07–)	10054 (610mm)	10044 (350mm)
Albea (01/02–)	10053 (580mm)	10048 (450mm)
Barchetta (01/95–02/05)	10049 (480mm)	10049 (480mm)
Brava (10/95–09/01)	10052 (550mm)	10050 (510mm)
Bravo (10/95–09/01)	10052 (550mm)	10050 (510mm)
Bravo (03/07–)	10054 (610mm)	10048 (450mm)
Cinquecento (07/91–07/98)	10049 (480mm)	10049 (480mm)
Coupé (02/94–09/00)	10051 (530mm)	10049 (480mm)
Croma (05/91–12/96)	10050 (510mm)	10049 (480mm)
Croma (06/05–)	10054 (630mm)	10047 (430mm)
Doblo, Doblo Cargo (07/00–)	10051 (530mm)	10048 (450mm)
Ducato (03/94–08/06)	10052 (550mm)	10051 (530mm)
Ducato (06/06–)	10055 (660mm)	10051 (530mm)
Fiorino (12/07–)	10055 (660mm)	10049 (480mm)
Fiorino (09/93–12/01)	10048 (450mm)	
Fiorino Qubo (09/08–)	10055 (660mm)	10049 (480mm)
Idea (01/04–03/08)	10053 (580mm)	10046 (410mm)
Idea (04/08–)	10053 (580mm)	10045 (380mm)
Linea (03/07–)	10055 (660mm)	10045 (380mm)
Marea (10/96–)	10052 (550mm)	10049 (480mm)
Marengo (02/90–12/96)	10050 (510mm)	10050 (510mm)
Marengo (01/97–09/02)	10052 (550mm)	10049 (480mm)
Multipia (01/99–12/05)	10054 (610mm)	10051 (530mm)
Multipia (01/06–)	10054 (610mm)	10052 (550mm)
Palio (03/98–)	10053 (580mm)	10048 (450mm)
Palio Weekend (09/97–09/01)	10053 (580mm)	10048 (450mm)

Stěrač FLAT MULTI

Orientační tabulka typů aut s odpovídající délkou originálních stěračů

TABULKA POUŽITÍ

FIAT



☛ pokračování		
Panda (07/90–09/03)	10046 (410mm)	
Panda (10/03–)	10053 (580mm)	10046 (410mm)
Punto (08/93–08/99)	10053 (580mm)	10046 (410mm)
Punto (07/99–)	10051 (530mm)	10048 (450mm)
Punto Cabrio (04/94–08/99)	10053 (580mm)	10046 (410mm)
Punto Grande (10/05–)	10055 (660mm)	10045 (380mm)
Punto GT (08/93–08/99)	10053 (580mm)	10046 (410mm)
Punto VAN (05/97–08/99)	10053 (580mm)	10046 (410mm)
Punto VAN (05/99–)	10051 (530mm)	10048 (450mm)
Scudo (10/95–)	10055 (660mm)	10050 (510mm)
Sedici (05/06–)	10055 (660mm)	10043 (330mm)
Seicento (03/98–)	10049 (480mm)	10049 (480mm)
Siena (05/98–12/01)	10053 (580mm)	10048 (450mm)
Stilo (10/01–06/05)	10051 (530mm)	10048 (450mm)
Stilo (07/05–)	10052 (550mm)	10049 (480mm)
Stilo Multi Wagon (10/02–06/05)	10051 (530mm)	10048 (450mm)
Stilo Multi Wagon (07/05–)	10052 (550mm)	10049 (480mm)
Strada (03/99–)	10053 (580mm)	10048 (450mm)
Talento (03/88–12/94)	10050 (510mm)	10050 (510mm)
Tempira (04/93–12/96)	10050 (510mm)	10050 (510mm)
Tipo (88–93)	10049 (480mm)	10049 (480mm)
Ulysse (09/94–09/02)	10055 (660mm)	10050 (510mm)
Ulysse (10/02–)	10055 (660mm)	10055 (660mm)
Uno (09/89–)	10048 (450mm)	
Uno Van (09/89–03/94)	10048 (450mm)	

FORD



C-MAX (03/07–)	10055 (660mm)	10049 (480mm)
Cougar (08/98–12/00)	10052 (550mm)	10050 (510mm)
Escort V/Vi (08/90–12/94)	10050 (510mm)	10050 (510mm)
Escort V/Vi Turnier (90–94)	10050 (510mm)	10050 (510mm)
Escort VII (01/95–09/01)	10050 (510mm)	10050 (510mm)
Escort VII Turnier (95–01)	10050 (510mm)	10050 (510mm)
Escort Wagon (10/96–08/03)	10050 (510mm)	10050 (510mm)
Expedition (09/96–08/04)	10052 (550mm)	10052 (550mm)
Explorer (01–)	10052 (550mm)	10052 (550mm)
Festiva (01/93–)	10050 (510mm)	10048 (450mm)
Fiesta III (03/89–12/96)	10049 (480mm)	10049 (480mm)
Fiesta IV/V (10/95–12/02)	10049 (480mm)	10049 (480mm)
Fiesta IV/V Courier (95–02)	10049 (480mm)	10049 (480mm)
Fiesta VI (11/01–)	10052 (550mm)	10046 (410mm)
Fiesta VII (07/08–)	10055 (660mm)	10045 (380mm)
Five Hundred (09/04–08/05)	10054 (610mm)	10050 (510mm)
Focus C-MAX (06/03–03/07)	10055 (660mm)	10049 (480mm)
Focus I (08/98–05/05)	10052 (550mm)	10049 (480mm)
Focus I Turnier (11/98–05/05)	10052 (550mm)	10049 (480mm)
Focus II (07/04–)	10055 (660mm)	10047 (430mm)
Focus II Cabriolet (07/06–)	10055 (660mm)	10047 (430mm)
Focus II Turnier (07/04–)	10055 (660mm)	10047 (430mm)
Freestyle (09/04–12/06)	10054 (610mm)	10050 (510mm)
Fusion (10/02–)	10052 (550mm)	10046 (410mm)
Galaxy (04/01–08/06)	10056 (710mm)	10056 (710mm)
Granada III (02/92–09/94)	10050 (510mm)	10050 (510mm)
Ka I (09/96–09/08)	10049 (480mm)	10047 (430mm)
Ka II (09/08–)	10054 (610mm)	10044 (350mm)
Kuga (02/08–)	10054 (610mm)	10046 (410mm)
Maverick (06/93–12/98)	10051 (530mm)	10050 (510mm)
Maverick (10/00–)	10049 (480mm)	10049 (480mm)
Mondeo I (01/93–07/96)	10051 (530mm)	10050 (510mm)
Mondeo I Turnier (93–96)	10051 (530mm)	10050 (510mm)
Mondeo II Turnier (96–00)	10051 (530mm)	10050 (510mm)
Mondeo III Turnier (00–07)	10052 (550mm)	10050 (510mm)
Mondeo IV (02/07–)	10055 (660mm)	10049 (480mm)
Mondeo IV Turnier (02/07–)	10055 (660mm)	10049 (480mm)
Mondeo II (08/96–09/00)	10051 (530mm)	10050 (510mm)
Mondeo III (10/00–03/07)	10052 (550mm)	10050 (510mm)
Orion I (83–90)	10048 (450mm)	10048 (450mm)
Orion II (91–95)	10050 (510mm)	10050 (510mm)
Probe (08/92–09/97)	10051 (530mm)	10050 (510mm)
Puma (06/97–12/01)	10049 (480mm)	10049 (480mm)
Ranger (01–)	10048 (450mm)	10048 (450mm)
Scorpio I (02/92–09/94)	10050 (510mm)	10050 (510mm)
Scorpio I Turnier (92–94)	10050 (510mm)	10050 (510mm)
Scorpio II (01/95–12/98)	10050 (510mm)	10050 (510mm)
Scorpio II Turnier (95–98)	10050 (510mm)	10050 (510mm)
Siera (82–93)	10050 (510mm)	10050 (510mm)
S-MAX (03/06–)	10055 (660mm)	
Streetka (12/02–12/05)	10049 (480mm)	10049 (480mm)
Taurus (09/99–12/06)	10054 (610mm)	10050 (510mm)
Taurus Wagon (99–05)	10054 (610mm)	10050 (510mm)
Tourneo Connect (05/02–)	10052 (550mm)	10050 (510mm)
Transit (08/91–08/00)	10052 (550mm)	10051 (530mm)
Transit (01/00–07/06)	10056 (710mm)	10054 (610mm)
Transit Connect (05/02–)	10052 (550mm)	10050 (510mm)
Windstar (09/94–08/03)	10054 (610mm)	10050 (510mm)

FSM / FSO



126 (12/94–12/00)	10043 (330mm)	10043 (330mm)
126P (–00)	10043 (330mm)	10043 (330mm)
127P (–92)	10043 (330mm)	10043 (330mm)
Polonez Atu (01/96–12/02)	10046 (410mm)	10046 (410mm)
Polonez Caro (05/87–12/02)	10046 (410mm)	10046 (410mm)

GAZ / VOLGA



GAZelle (01/97–10)	10050 (510mm)	10050 (510mm)
Sobol (01/94–)	10050 (510mm)	10050 (510mm)
Volga (01/86–)	10046 (410mm)	10046 (410mm)
Volga Kombi (01/97–)	10046 (410mm)	10046 (410mm)
Volga Siber (01/08–)	10052 (550mm)	10051 (530mm)

HONDA



Accord (02/03–06/08)	10055 (660mm)	10046 (410mm)
Accord (07/08–)	10054 (610mm)	10051 (530mm)
Accord Aerodeck (91–98)	10052 (550mm)	10050 (510mm)
Accord Coupe (93–98)	10052 (550mm)	10050 (510mm)
Accord Hatchb. (98–03)	10052 (550mm)	10049 (480mm)
Accord Sedan (01/91–12/99)	10052 (550mm)	10050 (510mm)
Accord Sedan (10/98–02/03)	10052 (550mm)	10049 (480mm)
Accord Tourer (02/03–08/08)	10055 (660mm)	10046 (410mm)
Accord Tourer (09/08–)	10054 (610mm)	10051 (530mm)
Ballade (01/96–02/01)	10050 (510mm)	10048 (450mm)
Civic Aerodeck (03/98–02/01)	10050 (510mm)	10048 (450mm)
Civic Coupe (09/92–08/00)	10050 (510mm)	10048 (450mm)
Civic CRX (03/92–12/98)	10050 (510mm)	10048 (450mm)
Civic Fastback (09/94–02/01)	10050 (510mm)	10048 (450mm)
Civic Hatchb. (10/91–02/01)	10050 (510mm)	10048 (450mm)
Civic Hatchb. (02/01–12/05)	10054 (610mm)	10044 (350mm)
Civic Hybrid (01/08–)	10055 (660mm)	10053 (580mm)
Civic Sedan (10/91–02/01)	10050 (510mm)	10048 (450mm)
Civic Sedan (02/01–01/06)	10051 (530mm)	10049 (480mm)
Civic Shuttle (01/88–06/95)	10049 (480mm)	10047 (430mm)
Concerto Hatchb. (89–95)	10048 (450mm)	10048 (450mm)
Concerto Sedan (89–95)	10048 (450mm)	10048 (450mm)
CR-V (07/02–09/06)	10051 (530mm)	10050 (510mm)
CR-V (01/07–)	10055 (660mm)	10046 (410mm)
FR-V (01/05–)	10055 (660mm)	10048 (450mm)
HR-V (12/98–12/05)	10050 (510mm)	10048 (450mm)
Insight (08/00–)	10050 (510mm)	10048 (450mm)
Insight (04/09–)	10055 (660mm)	10046 (410mm)
Integra Type R (98–01)	10050 (510mm)	10048 (450mm)
Jazz (03/02–12/08)	10051 (530mm)	10045 (380mm)
Jazz (11/08–)	10055 (660mm)	10046 (410mm)
Legend (01/91–12/95)	10051 (530mm)	10049 (480mm)
Legend (01/96–12/04)	10050 (510mm)	10049 (480mm)
Legend Coupe (91–96)	10051 (530mm)	10049 (480mm)
Logo (10/96–)	10050 (510mm)	10048 (450mm)
NSX Coupe (06/90–09/05)	10050 (510mm)	10050 (510mm)
Prelude (02/92–09/96)	10051 (530mm)	10049 (480mm)
S2000 (04/99–)	10050 (510mm)	10046 (410mm)
Shuttle (01/95–05/01)	10052 (550mm)	10052 (550mm)
Stream (05/01–)	10054 (610mm)	10043 (330mm)

HUMMER



H2 (10/04–)	10043 (330mm)	10043 (330mm)
H3 (09/05–08/06)	10043 (330mm)	10043 (330mm)

HYUNDAI



Accent (07/94–07/99)	10050 (510mm)	10048 (450mm)
Accent (05/99–03/06)	10050 (510mm)	10048 (450mm)
Accent (04/06–)	10052 (550mm)	10046 (410mm)
Accent Hatchb. (94–06)	10050 (510mm)	10048 (450mm)
Accent Hatchb. (04/06–)	10052 (550mm)	10046 (410mm)
Atos (09/97–12/03)	10050 (510mm)	10046 (410mm)
Atos Prime (09/99–03/08)	10050 (510mm)	10046 (410mm)
Avante HD (04/06–)	10054 (610mm)	10048 (450mm)
Azera (11/06–)	10054 (610mm)	10049 (480mm)
Coupe (05/96–)	10051 (530mm)	10048 (450mm)
Elantra (10/90–)	10050 (510mm)	10048 (450mm)
Elantra Hatchb. (06/00–)	10050 (510mm)	10048 (450mm)
Excel (07/94–07/99)	10050 (510mm)	10048 (450mm)
Excel Hatchb. (95–99)	10050 (510mm)	10048 (450mm)
Getz (09/02–)	10052 (550mm)	10043 (330mm)

HYUNDAI



☛ pokračování		
Grandeur (07/05–)	10054 (610mm)	10049 (480mm)
Grandeur New (92–99)	10052 (550mm)	10050 (510mm)
Grandeur TG (06/05–)	10054 (610mm)	10050 (510mm)
Grandeur XG New (02–05)	10052 (550mm)	10050 (510mm)
H-1 (10/97–05/07)	10055 (660mm)	10050 (510mm)
H100 (02/93–03/00)	10050 (510mm)	10048 (450mm)
i10 (03/08–)	10052 (550mm)	10046 (410mm)
i20 (01/09–)	10054 (610mm)	10046 (410mm)
i30 (09/07–)	10054 (610mm)	10048 (450mm)
i30 CW Kombi (03/08–)	10054 (610mm)	10048 (450mm)
ix55 (04/09–)	10054 (610mm)	10050 (510mm)
Lantra (10/90–09/00)	10050 (510mm)	10048 (450mm)
Lantra Stat. Wag. (95–00)	10050 (510mm)	10048 (450mm)
Matrix (08/01–)	10052 (550mm)	10046 (410mm)
Pony (04/89–07/94)	10048 (450mm)	10048 (450mm)
Pony (07/94–07/99)	10050 (510mm)	10048 (450mm)
Santa Fé (09/99–12/05)	10052 (550mm)	10050 (510mm)
Santa Fé (03/06–)	10054 (610mm)	10048 (450mm)
Scoupe (04/91–04/95)	10049 (480mm)	10047 (430mm)
Sonata (09/97–)	10051 (530mm)	10048 (450mm)
Sonata II (07/93–06/98)	10050 (510mm)	10050 (510mm)
Sonata II (05/96–06/98)	10050 (510mm)	10049 (480mm)
Sonata III (03/98–03/01)	10050 (510mm)	10049 (480mm)
Sonata IV (04/01–11/04)	10052 (550mm)	10050 (510mm)
Sonata NF (09/04–10/07)	10054 (610mm)	10050 (510mm)
Sonata V (12/04–)	10054 (610mm)	10050 (510mm)
Starex (97–)	10055 (660mm)	10050 (510mm)
Stellar (09/89–12/01)	10048 (450mm)	10048 (450mm)
Terracan (01/01–)	10052 (550mm)	10050 (510mm)
Trajet (01/00–06/07)	10055 (660mm)	10052 (550mm)
Tucson (08/04–)	10054 (610mm)	10046 (410mm)
Veracruz (10/06–)	10054 (610mm)	10050 (510mm)
XG (12/98–12/05)	10052 (550mm)	10050 (510mm)

CHEVROLET / DAEWOO

Aveo (02/06–)	10052 (550mm)	10046 (410mm)
Aveo Hatchback (04/08–)	10052 (550mm)	10046 (410mm)
Blazer (00–)	10051 (530mm)	10050 (510mm)
Captiva (10/06–)	10054 (610mm)	10046 (410mm)
Cielo (08/94–08/97)	10048 (450mm)	10048 (450mm)
Corvette Coupe (01/97–08/03)	10053 (580mm)	10053 (580mm)
Epica (06/06–)	10052 (550mm)	10050 (510mm)
Espero (09/93–10/99)	10048 (450mm)	10048 (450mm)
Evanda (02/05–09/06)	10052 (550mm)	10050 (510mm)
HHR (02/08–)	10048 (450mm)	10048 (450mm)
Impala (01/99–)	10053 (580mm)	10053 (580mm)
Kalos (09/02–)	10052 (550mm)	10046 (410mm)
Kalos Hatchback (09/02–)	10052 (550mm)	10046 (410mm)
Korando (07/96–12/00)	10048 (450mm)	10048 (450mm)
Lacetti (03/04–)	10052 (550mm)	10049 (480mm)
Lanos (11/96–09/03)	10049 (480mm)	10049 (480mm)
Lanos Hatchb. (11/96–09/03)	10049 (480mm)	10049 (480mm)
Le Mans (09/88–03/94)	10048 (450mm)	10048 (450mm)
Leganza (03/97–12/02)	10051 (530mm)	10049 (480mm)
Magnus (12/99–01/06)	10052 (550mm)	10049 (480mm)
Matiz (04/98–01/05)	10051 (530mm)	10045 (380mm)
Matiz (02/05–)	10052 (550mm)	10043 (330mm)
Metro (01/98–)	10051 (530mm)	10049 (480mm)
Musso (07/93–12/00)	10050 (510mm)	10048 (450mm)
Nexia (11/94–)	10048 (450mm)	10048 (450mm)
Nexia Hatchb. (11/94–08/97)	10048 (450mm)	10048 (450mm)
Nubira (09/97–09/99)	10050 (510mm)	10049 (480mm)
Nubira (10/99–)	10052 (550mm)	10049 (480mm)
Nubira Hatchb. (97–99)	10050 (510mm)	10049 (480mm)
Nubira Stat. Wag. (10/99–)	10052 (550mm)	10049 (480mm)
Nubira Stat. Wag. (02/05–)	10052 (550mm)	10049 (480mm)
Prizm (01/98–09/02)	10050 (510mm)	10048 (450mm)
Rezzo (09/00–)	10054 (610mm)	10048 (450mm)
Spark (06–)	10052 (550mm)	10043 (330mm)
Tacuma (03–)	10054 (610mm)	10049 (480mm)
Tahoe (00–)	10053 (580mm)	10053 (580mm)
Tico (06/91–01/05)	10046 (410mm)	10046 (410mm)

Stěrač FLAT MULTI

TABULKA POUŽITÍ

Orientační tabulka typů aut s odpovídající délkou originálních stěračů

CHRYSLER/JEEP	L	P
300 (08/04-)	10052 (550mm)	10051 (530mm)
300C (10/04-)	10052 (550mm)	10051 (530mm)
300C Touring (10/04-)	10052 (550mm)	10051 (530mm)
300M (06/98-12/04)	10054 (610mm)	10049 (480mm)
Commander (01/06-)	10048 (450mm)	10048 (450mm)
Compass (10/06-)	10052 (550mm)	10050 (510mm)
Crossfire Coupe (03/02-)	10052 (550mm)	10050 (510mm)
Crossfire Roadster (03/02-)	10052 (550mm)	10050 (510mm)
Grand Cherokee (10/98-)	10051 (530mm)	10051 (530mm)
Grand Voyager (09/07-)	10055 (660mm)	10050 (510mm)
Cherokee (97-00)	10048 (450mm)	10048 (450mm)
Cherokee (03/01-12/07)	10049 (480mm)	10049 (480mm)
Neon (04/94-12/05)	10051 (530mm)	10048 (450mm)
Neon Coupe (09/95-06/99)	10051 (530mm)	10049 (480mm)
Patriot (10/06-)	10051 (530mm)	10051 (530mm)
PT Cruiser (06/00-)	10051 (530mm)	10050 (510mm)
PT Cruiser Cabrio (09/00-)	10051 (530mm)	10050 (510mm)
Sebring (10/00-12/06)	10052 (550mm)	10051 (530mm)
Sebring (01/07-)	10054 (610mm)	10051 (530mm)
Sebring Cabrio (01-06)	10052 (550mm)	10051 (530mm)
Sebring Cabrio (01/07-)	10054 (610mm)	10051 (530mm)
Stratus (08/95-04/01)	10052 (550mm)	10051 (530mm)
Stratus Cabrio (95-01)	10052 (550mm)	10051 (530mm)
Voyager (01/95-12/00)	10055 (660mm)	10055 (660mm)
Voyager (01/01-)	10055 (660mm)	10055 (660mm)
Wrangler (01/97-)	10044 (350mm)	10044 (350mm)
Wrangler (01/07-)	10044 (350mm)	10044 (350mm)
Wrangler Unlimited (07-)	10044 (350mm)	10044 (350mm)

ISUZU	L	P
Amigo (89-)	10048 (450mm)	10048 (450mm)
KB-Series (05/93-02/03)	10048 (450mm)	10048 (450mm)
Oasis (96-)	10054 (610mm)	10054 (610mm)
Rodeo (91-)	10048 (450mm)	10048 (450mm)
Serie N (09/85-)	10050 (510mm)	10050 (510mm)
Trooper (08/92-09/04)	10050 (510mm)	10050 (510mm)

IVECO	L	P
Daily (05/99-)	10054 (610mm)	10054 (610mm)
Daily, Grinta (07/89-12/00)	10054 (610mm)	10054 (610mm)
Massif (06/08-)	10048 (450mm)	10046 (410mm)

JAGUAR	L	P
Daimler (01/99-08/02)	10051 (530mm)	
S-Type (02-)	10054 (610mm)	10049 (480mm)
S-Type (-02)	10052 (550mm)	10052 (550mm)
XF (03/08-)	10054 (610mm)	10049 (480mm)
XJ8 (09/97-01/03)	10051 (530mm)	
XJR8 (09/97-09/02)	10051 (530mm)	
XK8 Convertible (01/99-)	10051 (530mm)	10051 (530mm)
XK8 Coupe (01/99-)	10051 (530mm)	10051 (530mm)
XKR8 Convertible (01/99-)	10051 (530mm)	10051 (530mm)
XKR8 Coupe (01/99-)	10051 (530mm)	10051 (530mm)

KIA	L	P
Capital (03/89-06/95)	10048 (450mm)	10048 (450mm)
Carens I (04/99-05/02)	10054 (610mm)	10048 (450mm)
Carens II (02/02-)	10054 (610mm)	10048 (450mm)
Carens (09/06-02/07)	10055 (660mm)	10046 (410mm)
Carens New (04/06-)	10055 (660mm)	10046 (410mm)
Carnival I (06/98-09/01)	10054 (610mm)	10054 (610mm)
Carnival II (10/01-)	10054 (610mm)	10054 (610mm)
Carnival III (01/06-)	10055 (660mm)	10048 (450mm)
Cee'd (11/06-06/10)	10054 (610mm)	10048 (450mm)
Cee'd (06/10-)	10054 (610mm)	10048 (450mm)
Cee'd Sporty Wagon (07-10)	10054 (610mm)	10048 (450mm)
Cee'd Sporty Wagon (06/10-)	10054 (610mm)	10048 (450mm)
Cerato (03/04-)	10054 (610mm)	10046 (410mm)
Cerato Hatchback (03/04-)	10054 (610mm)	10046 (410mm)
Clarús I (05/96-05/98)	10051 (530mm)	10049 (480mm)
Clarús II (06/98-11/01)	10051 (530mm)	10049 (480mm)
Clarús II Kombi (98-01)	10051 (530mm)	10049 (480mm)
Magentis (09/00-12/05)	10052 (550mm)	10050 (510mm)
Magentis (02/06-)	10054 (610mm)	10048 (450mm)
Mentor II (01/01-08/04)	10051 (530mm)	10049 (480mm)
Mentor II Hatchb. (01-04)	10051 (530mm)	10049 (480mm)

KIA	L	P
☛ pokračování		
Opirus (03/03-)	10054 (610mm)	10048 (450mm)
Opirus New (06/06-02/07)	10054 (610mm)	10048 (450mm)
Picanto (05/04-)	10052 (550mm)	10046 (410mm)
Pregio (02/97-12/03)	10051 (530mm)	10048 (450mm)
Pride (05/90-02/00)	10048 (450mm)	10048 (450mm)
Pro Cee'd (03/08-06/10)	10054 (610mm)	10048 (450mm)
Pro Cee'd (06/10-)	10054 (610mm)	10048 (450mm)
Rio (07/00-02/05)	10051 (530mm)	10048 (450mm)
Rio (03/05-)	10052 (550mm)	10046 (410mm)
Rio Hatchback (09/00-)	10051 (530mm)	10048 (450mm)
Rio Hatchback (03/05-)	10052 (550mm)	10046 (410mm)
Rio Kombi (09/02-02/05)	10051 (530mm)	10048 (450mm)
Sephia I Hatchb. (96-00)	10051 (530mm)	10049 (480mm)
Sephia I Leo (09/96-09/97)	10051 (530mm)	10049 (480mm)
Sephia I (01/92-12/00)	10051 (530mm)	10049 (480mm)
Shuma I Hatchb. (98-00)	10051 (530mm)	10049 (480mm)
Shuma II (01/01-08/04)	10051 (530mm)	10049 (480mm)
Shuma II Hatchb. (01-04)	10051 (530mm)	10049 (480mm)
Shuma I (01/98-12/00)	10051 (530mm)	10049 (480mm)
Sorento (07/02-)	10054 (610mm)	10048 (450mm)
Soul (09/08-)	10054 (610mm)	10050 (510mm)
Spectra (01/01-)	10051 (530mm)	10050 (510mm)
Sportage (05/93-08/04)	10050 (510mm)	10049 (480mm)
Sportage New (08/04-)	10054 (610mm)	10046 (410mm)


LADA	L	P
2119 (96-)	10050 (510mm)	10050 (510mm)
2120 (96-)	10050 (510mm)	10050 (510mm)
21099 (01/90-01/04)	10051 (530mm)	10051 (530mm)
Kalina (11/04-)	10053 (580mm)	10046 (410mm)
Kalina Hatchback (07/06-)	10053 (580mm)	10046 (410mm)
Kalina Kombi (07/07-)	10053 (580mm)	10046 (410mm)
Niva (12/76-)	10043 (330mm)	10043 (330mm)
Niva Chevrolet (03-)	10050 (510mm)	10050 (510mm)
Priora (11/06-)	10050 (510mm)	10050 (510mm)
Samara (01/86-)	10051 (530mm)	10051 (530mm)
Samara (01/07-)	10053 (580mm)	10046 (410mm)
Samara Fun (09/88-)	10051 (530mm)	10051 (530mm)
Samara Hatchb. (01/86-)	10051 (530mm)	10051 (530mm)
Samara-2109 (86-)	10050 (510mm)	10050 (510mm)
Samara-2115 (96-)	10050 (510mm)	10050 (510mm)
Serie 110 (01/96-)	10050 (510mm)	10050 (510mm)
Serie 111 (01/96-)	10050 (510mm)	10050 (510mm)
Serie 112 (01/96-)	10050 (510mm)	10050 (510mm)
Serie 115 (01/98-)	10050 (510mm)	10050 (510mm)
Serie 2100 (09/75-)	10043 (330mm)	10043 (330mm)
Serie 21000 (01/82-)	10043 (330mm)	10043 (330mm)
Serie 21000 Kombi (06/03-)	10043 (330mm)	10043 (330mm)
Serie 2114 (01/07-)	10053 (580mm)	10046 (410mm)
Serie 2115 (01/07-)	10053 (580mm)	10046 (410mm)
Toscana (01/86-12/00)	10043 (330mm)	10043 (330mm)
VAZ 2101-2107 (71-)	10043 (330mm)	10043 (330mm)
VAZ 2121 Niva (78-)	10043 (330mm)	10043 (330mm)

LANCIA	L	P
Dedra Berlina (01/89-10/94)	10051 (530mm)	10049 (480mm)
Dedra Station Wag. (94-99)	10051 (530mm)	10049 (480mm)
Delta (03/89-12/94)	10048 (450mm)	10048 (450mm)
Delta (01/93-12/99)	10051 (530mm)	10049 (480mm)
Delta (07/08-)	10054 (610mm)	10048 (450mm)
Kappa Berlina (11/94-12/00)	10054 (610mm)	10050 (510mm)
Kappa Coupe (04/97-06/00)	10054 (610mm)	10050 (510mm)
Kappa Stat. Wag. (94-00)	10054 (610mm)	10050 (510mm)
Lybra Berlina (10/99-11/06)	10052 (550mm)	10051 (530mm)
Lybra Stati. Wag. (99-06)	10052 (550mm)	10051 (530mm)
Musa (10/04-09/07)	10052 (550mm)	10046 (410mm)
Musa (10/07-)	10053 (580mm)	10045 (380mm)
Phedra (09/02-09/05)	10055 (660mm)	10055 (660mm)
Phedra (10/05-)	10055 (660mm)	10055 (660mm)
Thema Berlina (05/92-11/94)	10050 (510mm)	10050 (510mm)
Thema Stat. Wag. (92-94)	10050 (510mm)	10050 (510mm)
Thesis (04/02-)	10055 (660mm)	10050 (510mm)
Ypsilon (01/96-06/03)	10053 (580mm)	10046 (410mm)
Ypsilon (06/03-)	10054 (610mm)	10046 (410mm)
ZETA (09/94-06/02)	10055 (660mm)	10050 (510mm)


LAND ROVER	L	P
Defender 110 (08/90-)	10043 (330mm)	10043 (330mm)
Defender 130 (08/90-)	10043 (330mm)	10043 (330mm)
Defender 90 (08/90-)	10043 (330mm)	10043 (330mm)
Discovery I (09/89-12/98)	10048 (450mm)	10048 (450mm)
Discovery II (10/98-10/04)	10051 (530mm)	10051 (530mm)
Discovery III (10/04-)	10052 (550mm)	10051 (530mm)
Freelander I (09/97-03/07)	10052 (550mm)	10050 (510mm)
Freelander II (10/06-)	10054 (610mm)	10049 (480mm)
Range Rover I (88-96)	10048 (450mm)	10048 (450mm)
Range Rover II (94-02)	10052 (550mm)	10052 (550mm)
Range Rover III (03/02-)	10055 (660mm)	10055 (660mm)
Range Rover IV Sport (05-)	10052 (550mm)	10051 (530mm)

LEXUS	L	P
GS (08/97-01/05)	10054 (610mm)	10050 (510mm)
IS (01/99-07/05)	10052 (550mm)	10049 (480mm)
IS (08/05-)	10052 (550mm)	10050 (510mm)
IS Wagon (07/01-07/05)	10052 (550mm)	10049 (480mm)
LS (08/00-08/06)	10054 (610mm)	10046 (410mm)
RX (01/98-02/03)	10054 (610mm)	10051 (530mm)

MAZDA	L	P
2 (02/03-06/07)	10054 (610mm)	10046 (410mm)
2 (06/07-)	10054 (610mm)	10044 (350mm)
3 (07/03-12/08)	10051 (530mm)	10049 (480mm)
3 (12/08-)	10054 (610mm)	10049 (480mm)
3 Hatchback (07/03-12/08)	10051 (530mm)	10049 (480mm)
3 Hatchback (12/08-)	10054 (610mm)	10049 (480mm)
5 (02/05-)	10055 (660mm)	10046 (410mm)
6 (08/07-)	10054 (610mm)	10046 (410mm)
6 Fastback (04/02-08/07)	10052 (550mm)	10049 (480mm)
6 Fastback (08/07-)	10054 (610mm)	10046 (410mm)
6 Sedan (02/02-08/07)	10052 (550mm)	10049 (480mm)
6 Wagon (06/02-12/07)	10052 (550mm)	10049 (480mm)
6 Wagon (12/07-)	10054 (610mm)	10046 (410mm)
121 (11/93-12/95)	10050 (510mm)	10046 (410mm)
121 (01/96-10/99)	10049 (480mm)	10049 (480mm)
121 (01/97-12/04)	10048 (450mm)	10048 (450mm)
323 (08/85-06/94)	10048 (450mm)	10048 (450mm)
323 (05/98-09/03)	10051 (530mm)	10049 (480mm)
323 Hatchb. (03/91-05/96)	10051 (530mm)	10048 (450mm)
323 Hatchb. (06/94-09/00)	10051 (530mm)	10048 (450mm)
323 Hatchb. (06/98-09/03)	10051 (530mm)	10049 (480mm)
323 Sedan (06/89-04/98)	10051 (530mm)	10048 (450mm)
323 Wagon (09/89-10/95)	10048 (450mm)	10048 (450mm)
626 (08/91-03/97)	10051 (530mm)	10050 (510mm)
626 (05/97-09/99)	10051 (530mm)	10048 (450mm)
626 Hatchb. (09/91-03/97)	10051 (530mm)	10050 (510mm)
626 Hatchb. (04/97-09/99)	10051 (530mm)	10048 (450mm)
626 Fastback (08/99-04/02)	10051 (530mm)	10049 (480mm)
626 Wagon (03/92-10/97)	10049 (480mm)	10049 (480mm)
626 Wagon (10/97-11/99)	10051 (530mm)	10048 (450mm)
CX 7 (12/06-)	10055 (660mm)	10046 (410mm)
Demio (07/96-02/03)	10050 (510mm)	10046 (410mm)
MPV (07/94-05/99)	10052 (550mm)	10050 (510mm)
MPV (05/99-08/04)	10054 (610mm)	10054 (610mm)
MX3 (05/91-01/99)	10051 (530mm)	10048 (450mm)
MX5 (09/93-11/97)	10048 (450mm)	10048 (450mm)
MX5 (01/98-07/05)	10048 (450mm)	10048 (450mm)
MX5 (07/05-)	10048 (450mm)	10048 (450mm)
MX6 (07/91-06/97)	10050 (510mm)	10050 (510mm)
Premacy (03/99-05/05)	10054 (610mm)	10046 (410mm)
RX 7 Coupe (08/93-02/96)	10050 (510mm)	10049 (480mm)
RX8 (04/03-)	10050 (510mm)	10048 (450mm)
Serie B (03/86-)	10048 (450mm)	10048 (450mm)
Serie B (03/96-03/06)	10048 (450mm)	10048 (450mm)
Tribute (02/01-)	10049 (480mm)	10049 (480mm)
Xedos 6 (01/92-02/99)	10051 (530mm)	10049 (480mm)
Xedos 9 (07/93-11/02)	10051 (530mm)	10049 (480mm)

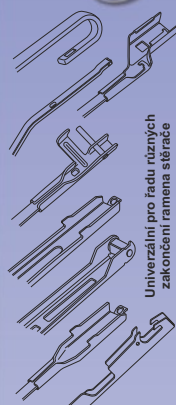

Univerzální pro řadu různých zakončení ramena stěrače

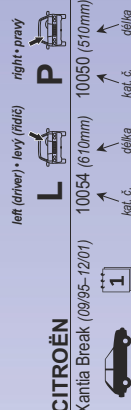

In 1999 Certified Germany TUV ISO9002



pokračování ➔

Stěrač FLAT MULTI

Orientační tabulka typů aut s odpovídající délkou originálních stěračů

TABULKA POUŽITÍ

MERCEDES BENZ

	L	P
2t (10/88–06/95)	10050 (510mm)	10050 (510mm)
3t (10/88–06/95)	10050 (510mm)	10050 (510mm)
4t (11/88–06/95)	10050 (510mm)	10050 (510mm)
Serie 190 (09/91–04/94)	10054 (610mm)	
Serie A (10/97–08/04)	10055 (660mm)	10054 (610mm)
Serie A (09/04–)	10055 (660mm)	10053 (580mm)
Serie B (04/05–)	10055 (660mm)	10053 (580mm)
Serie C (05/00–06/03)	10054 (610mm)	10051 (530mm)
Serie C (03/07–)	10054 (610mm)	10054 (610mm)
Serie C (03/93–04/00)	10054 (610mm)	
Serie C (07/03–08/07)	10052 (550mm)	10052 (550mm)
Serie C (Sport coupe) (01–03)	10054 (610mm)	10051 (530mm)
Serie C (Sport coupe) (03–08)	10052 (550mm)	10052 (550mm)
Serie C (T-Model) (01–03)	10054 (610mm)	10051 (530mm)
Serie C (T-Model) (09/07–)	10054 (610mm)	10054 (610mm)
Serie C (T-Model) (96–01)	10054 (610mm)	
Serie C (T-Model) (03–07)	10052 (550mm)	10052 (550mm)
Serie CL (06/96–08/99)	10056 (710mm)	
Serie CLC (03/08–)	10052 (550mm)	10052 (550mm)
Serie CLK (01/97–06/02)	10054 (610mm)	
Serie CLK (05/02–)	10052 (550mm)	10052 (550mm)
Serie CLK (Cabrio) (96–03)	10054 (610mm)	
Serie CLK (Cabrio) (02/03–)	10052 (550mm)	10052 (550mm)
Serie CLS (06/04–)	10055 (660mm)	10055 (660mm)
Serie E (03/02–)	10055 (660mm)	10055 (660mm)
Serie E (08/08–)	10054 (610mm)	10054 (610mm)
Serie E (02/92–07/95)	10054 (610mm)	
Serie E (06/95–01/03)	10054 (610mm)	
Serie E (Cabrio) (93–98)	10054 (610mm)	
Serie E (Coupe) (02/09–)	10054 (610mm)	10054 (610mm)
Serie E (Coupe) (93–98)	10054 (610mm)	
Serie E (T-Model) (02/03–)	10055 (660mm)	10055 (660mm)
Serie E (T-Model) (93–96)	10054 (610mm)	
Serie G (09/89–)	10046 (410mm)	10046 (410mm)
Serie GL (02/06–)	10056 (710mm)	10051 (530mm)
Serie GLK (06/08–)	10052 (550mm)	10048 (450mm)
Serie ML (03/98–06/05)	10052 (550mm)	10051 (530mm)
Serie ML (07/05–)	10056 (710mm)	10051 (530mm)
Serie R (02/06–)	10056 (710mm)	10051 (530mm)
Serie S (03/93–09/98)	10056 (710mm)	
Serie S (Coupe) (93–96)	10056 (710mm)	
Serie SL (10/01–)	10055 (660mm)	10055 (660mm)
Serie SL (07/93–08/01)	10054 (610mm)	
Serie SLK (09/96–03/04)	10052 (550mm)	10051 (530mm)
Serie SLK (04/04–)	10052 (550mm)	10052 (550mm)
Serie SLR (04/04–)	10055 (660mm)	10055 (660mm)
Serie V (04/96–09/03)	10055 (660mm)	10052 (550mm)
Sprinter (02/95–05/06)	10054 (610mm)	10051 (530mm)
Sprinter (04/06–)	10055 (660mm)	10054 (610mm)
Vaneo (02/02–01/04)	10055 (660mm)	10054 (610mm)
Vaneo (02/04–08/05)	10055 (660mm)	10053 (580mm)
Viano (09/03–08/05)	10056 (710mm)	10055 (660mm)
Viano (09/05–)	10056 (710mm)	10055 (660mm)
Vito (11/95–09/03)	10055 (660mm)	10052 (550mm)
Vito (10/03–08/05)	10056 (710mm)	10055 (660mm)
Vito (09/05–)	10056 (710mm)	10055 (660mm)

MERCURY

	L	P
Montego (01/05–12/06)	10054 (610mm)	10050 (510mm)

MG

	L	P
MG TF (03/02–)	10050 (510mm)	10049 (480mm)
ZR (10/01–05/05)	10048 (450mm)	10048 (450mm)
ZS (10/01–05/05)	10050 (510mm)	10048 (450mm)
ZS (03/05–05/05)	10048 (450mm)	10048 (450mm)
ZT (10/01–05/05)	10052 (550mm)	10051 (530mm)
ZT-Tourer (10/01–05/05)	10052 (550mm)	10051 (530mm)

MINI (BMW)

	L	P
Mini Cabrio (07/04–)	10048 (450mm)	10048 (450mm)
Mini Clubman (11/07–)	10048 (450mm)	10048 (450mm)
Mini Coupe (06/01–)	10048 (450mm)	10048 (450mm)

NISSAN

	L	P
3000 GT (06/92–12/00)	10051 (530mm)	10050 (510mm)
Carisma (05/95–12/03)	10051 (530mm)	10050 (510mm)
Colt (12/91–11/95)	10050 (510mm)	10048 (450mm)
Colt (11/95–06/03)	10051 (530mm)	10049 (480mm)
Colt (04/04–)	10055 (660mm)	10041 (280mm)
Colt Cabrio (05/06–)	10055 (660mm)	10041 (280mm)
Delica Stat. Wag. (86–99)	10048 (450mm)	10048 (450mm)
Eclipse (04/91–03/94)	10050 (510mm)	10049 (480mm)
Galant (11/91–05/03)	10051 (530mm)	10048 (450mm)
Galant Stat. Wag. (96–02)	10051 (530mm)	10048 (450mm)
Gallop (05/98–12/01)	10048 (450mm)	10048 (450mm)
Grandis (01/04–)	10056 (710mm)	10052 (550mm)
L 200 (01/96–)	10049 (480mm)	10049 (480mm)
L 200 (12/05–)	10051 (530mm)	10049 (480mm)
L 300 (12/87–05/96)	10048 (450mm)	10048 (450mm)
L 300 Truck (11/86–05/94)	10048 (450mm)	10048 (450mm)
L 300 Truck (06/94–12/01)	10048 (450mm)	10048 (450mm)
L 300 Van (11/86–12/01)	10048 (450mm)	10048 (450mm)
L 300 Wagon (11/86–12/00)	10048 (450mm)	10048 (450mm)
L 400 (12/94–03/01)	10048 (450mm)	10048 (450mm)
Lancer (04/88–12/96)	10050 (510mm)	10048 (450mm)
Lancer (11/95–05/01)	10051 (530mm)	10049 (480mm)
Lancer (02/08–)	10054 (610mm)	10046 (410mm)
Lancer (12/00–)	10054 (610mm)	10048 (450mm)
Lancer Hatchb. (92–95)	10050 (510mm)	10048 (450mm)
Lancer Sedan (05/96–05/01)	10051 (530mm)	10049 (480mm)
Lancer Stat. Wag. (92–95)	10050 (510mm)	10048 (450mm)
Lancer Stat. Wag. (06/03–)	10054 (610mm)	10048 (450mm)
Outlander (12/06–)	10054 (610mm)	10051 (530mm)
Pajero (12/90–06/00)	10049 (480mm)	10049 (480mm)
Pajero (10/06–)	10052 (550mm)	10050 (510mm)
Pajero Cabrio (12/90–05/01)	10049 (480mm)	10049 (480mm)
Pajero Pinin (06/98–)	10049 (480mm)	10049 (480mm)
Pajero Sport (07/96–)	10050 (510mm)	10050 (510mm)
Sigma (12/90–03/96)	10051 (530mm)	10049 (480mm)
Space Runner (06/91–05/99)	10051 (530mm)	10048 (450mm)
Space Star (06/98–)	10051 (530mm)	10048 (450mm)
Space Wagon (06/92–11/00)	10052 (550mm)	10050 (510mm)

MOSKVITCH

	L	P
Aleko (86–)	10048 (450mm)	10048 (450mm)
Sviatogor (86–)	10048 (450mm)	10048 (450mm)

NISSAN

	L	P
100 NX (10/92–10/94)	10051 (530mm)	10049 (480mm)
300 ZX (01/90–03/96)	10051 (530mm)	10051 (530mm)
350 Z (12/03–)	10050 (510mm)	10048 (450mm)
350 Z Cabriolet (11/04–)	10050 (510mm)	10048 (450mm)
350 Z Coupe (07/03–)	10050 (510mm)	10048 (450mm)
Almera Hatchb. (95–00)	10051 (530mm)	10049 (480mm)
Almera Hatchb. (00–06)	10052 (550mm)	10046 (410mm)
Almera Sedan (95–00)	10051 (530mm)	10049 (480mm)
Almera Sedan (00–01)	10052 (550mm)	10046 (410mm)
Almera Sedan (03/01–11/06)	10052 (550mm)	10046 (410mm)
Almera Tino (05/00–12/05)	10055 (660mm)	10048 (450mm)
Cabstar (09/06–)	10050 (510mm)	10050 (510mm)
Cabstar E (10/98–08/06)	10048 (450mm)	10048 (450mm)
E20 (05/81–12/96)	10046 (410mm)	10046 (410mm)
Interstar (07/02–)	10054 (610mm)	10054 (610mm)
Kubistar (07/03–)	10050 (510mm)	10049 (480mm)
March (01/92–11/99)	10050 (510mm)	10048 (450mm)
Maxima (10/88–06/94)	10051 (530mm)	10051 (530mm)
Maxima QX (10/94–01/00)	10051 (530mm)	10051 (530mm)
Maxima QX (01/00–01/06)	10055 (660mm)	10048 (450mm)
Micra (08/92–10/02)	10050 (510mm)	10048 (450mm)
Micra (11/02–)	10051 (530mm)	10048 (450mm)
Micra CC (09/05–)	10051 (530mm)	10048 (450mm)
Murano (09/04–)	10055 (660mm)	10048 (450mm)
Navara (06/00–)	10049 (480mm)	10049 (480mm)
Navara (05/05–)	10054 (610mm)	10049 (480mm)
Note (01/06–)	10054 (610mm)	10044 (350mm)
Pathfinder (10/97–08/03)	10052 (550mm)	10050 (510mm)
Pathfinder (01/05–)	10054 (610mm)	10049 (480mm)
Patrol (04/89–05/98)	10049 (480mm)	10049 (480mm)
Patrol GR (08/87–11/97)	10049 (480mm)	10049 (480mm)
Patrol GR (08/97–)	10051 (530mm)	10050 (510mm)
Pickup (08/87–02/98)	10049 (480mm)	10049 (480mm)
Pickup (02/97–)	10049 (480mm)	10049 (480mm)

pokračování

NISSAN

	L	P
Pixo (03/09–)	10052 (550mm)	10043 (330mm)
Prairie Pro (04/92–07/94)	10052 (550mm)	10052 (550mm)
Primastar (07/02–)	10054 (610mm)	10051 (530mm)
Primera Hatchb. (90–96)	10051 (530mm)	10049 (480mm)
Primera Hatchb. (96–01)	10051 (530mm)	10050 (510mm)
Primera Hatchb. (05/02–)	10055 (660mm)	10048 (450mm)
Primera Sedan (90–96)	10051 (530mm)	10049 (480mm)
Primera Sedan (96–01)	10051 (530mm)	10050 (510mm)
Primera Sedan (12/01–)	10055 (660mm)	10048 (450mm)
Primera Wagon (90–97)	10051 (530mm)	10049 (480mm)
Primera Wagon (98–01)	10051 (530mm)	10050 (510mm)
Primera Wagon (12/01–)	10055 (660mm)	10048 (450mm)
Qashqai (12/06–)	10054 (610mm)	10045 (380mm)
Qashqai +2 (08/08–)	10054 (610mm)	10045 (380mm)
Serena (12/01–05/05)	10052 (550mm)	10046 (410mm)
Sunny Hatchb. (10/90–05/95)	10051 (530mm)	10049 (480mm)
Sunny Liftback (10/90–05/95)	10051 (530mm)	10049 (480mm)
Sunny Sedan (10/90–05/95)	10051 (530mm)	10049 (480mm)
Sunny Wagon (11/90–03/00)	10051 (530mm)	10049 (480mm)
Terrano II (05/96–12/06)	10051 (530mm)	10050 (510mm)
Tiida (02/07–)	10054 (610mm)	10044 (350mm)
Tiida Hatchback (03/07–)	10054 (610mm)	10044 (350mm)
Tiida Latio (10/04–)	10054 (610mm)	10043 (330mm)
Trade (10/83–12/00)	10050 (510mm)	10049 (480mm)
Urvan (11/86–06/97)	10049 (480mm)	10049 (480mm)
Vanette (04/87–11/94)	10048 (450mm)	10048 (450mm)
Vanette Cargo (07/92–11/01)	10054 (610mm)	10054 (610mm)
X-Trail (06/01–)	10054 (610mm)	10046 (410mm)
X-Trail (04/07–)	10054 (610mm)	10046 (410mm)

OPEL

	L	P
Agila (06/00–02/08)	10050 (510mm)	10048 (450mm)
Agila (03/08–)	10052 (550mm)	10046 (410mm)
Antara (05/06–)	10054 (610mm)	10046 (410mm)
Astra (09/91–02/98)	10048 (450mm)	10048 (450mm)
Astra (09/97–12/05)	10050 (510mm)	10049 (480mm)
Astra (03/04–)	10052 (550mm)	10048 (450mm)
Astra Cabrio (09/91–02/98)	10048 (450mm)	10048 (450mm)
Astra Cabrio (09/97–08/05)	10050 (510mm)	10049 (480mm)
Astra Caravan (09/91–02/98)	10048 (450mm)	10048 (450mm)
Astra Caravan (09/97–06/04)	10050 (510mm)	10049 (480mm)
Astra Caravan (08/04–)	10052 (550mm)	10048 (450mm)
Astra Classic (09/97–08/00)	10050 (510mm)	10049 (480mm)
Astra Coupe (09/97–02/05)	10050 (510mm)	10049 (480mm)
Astra GTC (03/05–)	10052 (550mm)	10048 (450mm)
Astra TwinTop (09/05–)	10052 (550mm)	10048 (450mm)
Calibra (06/90–03/97)	10049 (480mm)	10049 (480mm)
Campo Pick-Up (91–97)	10048 (450mm)	10048 (450mm)
Combo (09/94–10/01)	10048 (450mm)	10048 (450mm)
Combo (10/01–)	10049 (480mm)	10047 (430mm)
Corsa (09/82–08/94)	10046 (410mm)	10046 (410mm)
Corsa (03/93–09/00)	10048 (450mm)	10048 (450mm)
Corsa (09/00–09/06)	10050 (510mm)	10048 (450mm)
Corsa (07/06–)	10055 (660mm)	10046 (410mm)
Frontera (09/91–09/04)	10049 (480mm)	10049 (480mm)
GT (06/07–)	10052 (550mm)	10046 (410mm)
Insignia (09/08–)	10054 (610mm)	10048 (450mm)
Insignia Sports Tourer (09–)	10054 (610mm)	10048 (450mm)
Kadet (84–91)	10048 (450mm)	10048 (450mm)
Meriva (03/03–)	10054 (610mm)	10054 (610mm)
Monterey (09/91–12/97)	10050 (510mm)	10049 (480mm)
Movano (06/98–)	10054 (610mm)	10054 (610mm)
Omega (09/86–03/94)	10049 (480mm)	10049 (480mm)
Omega (09/93–09/03)	10054 (610mm)	10049 (480mm)
Rekord (08/88–12/95)	10048 (450mm)	10048 (450mm)
Rekord Estate (09/91–12/95)	10049 (480mm)	10049 (480mm)
Signum (05/03–09/08)	10054 (610mm)	10049 (480mm)
Sintra (09/96–09/99)	10054 (610mm)	10054 (610mm)
Tigra (09/94–08/99)	10048 (450mm)	10048 (450mm)
Tigra TwinTop (06/04–)	10050 (510mm)	10048 (450mm)
Vectra (09/88–08/95)	10049 (480mm)	10049 (480mm)
Vectra (09/95–09/03)	10049 (480mm)	10049 (480mm)
Vectra (09/01–10/08)	10054 (610mm)	10049 (480mm)
Vectra Caravan (95–03)	10049 (480mm)	10049 (480mm)
Vectra Caravan (03–08)	10054 (610mm)	10049 (480mm)
Vivaro (03/01–)	10054 (610mm)	10051 (530mm)
Zafira (03/99–07/05)	10054 (610mm)	10

Stěrač FLAT MULTI

TABULKA POUŽITÍ

Orientační tabulka typů aut s odpovídající délkou originálních stěračů

PEUGEOT	L	P
1007 (04/05–)	10054 (610mm)	10048 (450mm)
106 (09/91–04/96)	10050 (510mm)	10048 (450mm)
106 (07/95–05/05)	10050 (510mm)	10048 (450mm)
107 (06/05–)	10055 (660mm)	
205 Pickup (05/85–09/98)	10048 (450mm)	10048 (450mm)
206 (06/98–02/09)	10055 (660mm)	10046 (410mm)
206 CC (09/00–03/07)	10055 (660mm)	10046 (410mm)
206 SW (03/02–12/06)	10055 (660mm)	10046 (410mm)
206+ (03/09–)	10055 (660mm)	10046 (410mm)
207 (05/06–)	10055 (660mm)	10047 (430mm)
207 CC (03/07–)	10055 (660mm)	10047 (430mm)
207 SW (06/07–)	10055 (660mm)	10047 (430mm)
306 (01/93–04/97)	10052 (550mm)	10050 (510mm)
306 (05/97–10/03)	10052 (550mm)	10050 (510mm)
306 Break (05/97–03/02)	10052 (550mm)	10050 (510mm)
306 Cabriolet (01/93–10/03)	10052 (550mm)	10050 (510mm)
307 (08/00–05/05)	10056 (710mm)	10055 (660mm)
307 (10/04–08/07)	10056 (710mm)	10055 (660mm)
307 Break/SW (02–05)	10055 (660mm)	10055 (660mm)
307 Break/SW (04–05)	10056 (710mm)	10055 (660mm)
307 Break/SW (05–08)	10056 (710mm)	10055 (660mm)
307 CC (10/03–05/05)	10056 (710mm)	10054 (610mm)
307 CC (06/05–)	10056 (710mm)	10055 (660mm)
4007 (09/07–)	10054 (610mm)	10051 (530mm)
405 (06/92–04/97)	10052 (550mm)	10052 (550mm)
405 Break (06/92–04/97)	10052 (550mm)	10052 (550mm)
406 (10/95–06/04)	10054 (610mm)	10051 (530mm)
406 Break (10/96–06/04)	10054 (610mm)	10051 (530mm)
406 Coupe (03/97–02/05)	10055 (660mm)	10048 (450mm)
407 (05/04–)	10056 (710mm)	10056 (710mm)
407 Coupe (10/05–)	10056 (710mm)	10056 (710mm)
407 SW (05/04–)	10056 (710mm)	10056 (710mm)
605 (06/89–05/99)	10052 (550mm)	10052 (550mm)
806 (06/94–08/02)	10055 (660mm)	10050 (510mm)
807 (06/02–)	10055 (660mm)	10055 (660mm)
Bipper (02/08–)	10055 (660mm)	10049 (480mm)
Boxer (02/94–06/06)	10052 (550mm)	10051 (530mm)
Boxer (06/06–)	10055 (660mm)	10051 (530mm)
Expert (09/95–)	10055 (660mm)	10048 (450mm)
Expert (02/07–)	10055 (660mm)	10050 (510mm)
P4 (10/86–12/96)	10043 (330mm)	10043 (330mm)
Partner (07/96–05/08)	10052 (550mm)	10051 (530mm)
Partner (05/08–)	10055 (660mm)	10046 (410mm)
Ranch (07/97–)	10052 (550mm)	10051 (530mm)

PORSCHE	L	P
911 (09/93–08/97)	10048 (450mm)	10046 (410mm)
911 (09/97–)	10052 (550mm)	10051 (530mm)
968 (08/91–11/95)	10049 (480mm)	10049 (480mm)
Boxster (10/96–01/09)	10052 (550mm)	10051 (530mm)
Cayenne (09/02–01/07)	10055 (660mm)	10055 (660mm)
Cayenne (02/07–)	10055 (660mm)	10055 (660mm)
Cayman (11/05–01/09)	10052 (550mm)	10051 (530mm)

RENAULT	L	P
5 (07/89–12/96)	10048 (450mm)	10048 (450mm)
19 (06/89–12/01)	10050 (510mm)	10050 (510mm)
21 (03/86–12/94)	10048 (450mm)	10048 (450mm)
19 Cabrio (06/89–12/95)	10050 (510mm)	10050 (510mm)
21 Nevada (06/86–12/95)	10048 (450mm)	10048 (450mm)
Avantime (09/01–12/03)	10055 (660mm)	10048 (450mm)
Clio I (06/90–02/94)	10048 (450mm)	10048 (450mm)
Clio I (03/94–02/98)	10050 (510mm)	10049 (480mm)
Clio II (03/98–10/07)	10051 (530mm)	10048 (450mm)
Clio III (06/05–)	10054 (610mm)	10046 (410mm)
Clio III Grandtour (08/07–)	10054 (610mm)	10046 (410mm)
Espace I (01/91–09/96)	10054 (610mm)	10054 (610mm)
Espace III (10/96–10/02)	10055 (660mm)	10048 (450mm)
Express, Extra, Rapid (86–97)	10048 (450mm)	10048 (450mm)
Kangoo I (10/97–12/07)	10050 (510mm)	10049 (480mm)
Kangoo II (01/08–)	10052 (550mm)	10051 (530mm)
Koleos (09/08–)	10054 (610mm)	10049 (480mm)
Laguna I (01/94–03/01)	10054 (610mm)	10048 (450mm)
Laguna I Grandt. (95–01)	10054 (610mm)	10048 (450mm)
Laguna II (03/01–09/07)	10054 (610mm)	10050 (510mm)
Laguna II Grandt. (01–07)	10054 (610mm)	10050 (510mm)
Laguna III (07/07–)	10055 (660mm)	10046 (410mm)
Laguna III Coupe (02/08–)	10055 (660mm)	10046 (410mm)
Laguna III Grandt. (07/07–)	10055 (660mm)	10046 (410mm)
Master (11/97–)	10054 (610mm)	10054 (610mm)
Megane I (01/96–10/02)	10052 (550mm)	10050 (510mm)
Megane I Cabrio (96–03)	10052 (550mm)	10050 (510mm)
Megane I Classic (96–03)	10052 (550mm)	10050 (510mm)
Megane I Coupe (96–02)	10052 (550mm)	10050 (510mm)
Megane I Grandt. (98–03)	10052 (550mm)	10050 (510mm)

pokračování ➔

RENAULT	L	P
☛ pokračování		
Megane II (09/02–01/06)	10054 (610mm)	10048 (450mm)
Megane II (02/06–)	10054 (610mm)	10048 (450mm)
Megane II Cabrio (03–06)	10054 (610mm)	10048 (450mm)
Megane II Cabrio (02/06–)	10054 (610mm)	10048 (450mm)
Megane II Grandt. (03–06)	10054 (610mm)	10048 (450mm)
Megane II Grandt. (06–09)	10054 (610mm)	10048 (450mm)
Megane II Hatchb. (02–06)	10054 (610mm)	10048 (450mm)
Megane II Hatchb. (06–08)	10054 (610mm)	10048 (450mm)
Megane III Coupe (01/09–)	10054 (610mm)	10046 (410mm)
Megane III Grandt. (06/09–)	10054 (610mm)	10051 (530mm)
Megane III Hatchb. (11/08–)	10054 (610mm)	10046 (410mm)
Modus (06/04–)	10056 (710mm)	
Safrane (04/92–01/99)	10054 (610mm)	10054 (610mm)
Scenic I (01/96–04/03)	10054 (610mm)	10046 (410mm)
Scenic II (12/04–)	10055 (660mm)	10052 (550mm)
Thalia II (10/99–10/07)	10051 (530mm)	10048 (450mm)
Trafic (09/80–10/97)	10048 (450mm)	10048 (450mm)
Trafic (03/99–05/01)	10050 (510mm)	10050 (510mm)
Trafic (05/01–)	10054 (610mm)	10051 (530mm)
Twingo I (03/93–05/07)	10055 (660mm)	
Twingo II (04/07–)	10054 (610mm)	10046 (410mm)
Winnebago (03/88–12/00)	10048 (450mm)	10048 (450mm)

ROVER	L	P
25 (02/00–05/05)	10048 (450mm)	10048 (450mm)
45 (02/00–05/05)	10050 (510mm)	10048 (450mm)
75 (01/99–05/05)	10052 (550mm)	10051 (530mm)
100 Metro (05/90–12/98)	10046 (410mm)	10046 (410mm)
100 Metro Cabrio (90–97)	10046 (410mm)	10046 (410mm)
75 Tourer (01/01–05/05)	10052 (550mm)	10051 (530mm)
75 V8 Power (10/03–05/05)	10052 (550mm)	10051 (530mm)
75 V8 Power Tourer (03–05)	10052 (550mm)	10051 (530mm)
Mini (02/90–09/00)	10041 (280mm)	10041 (280mm)
Mini Cabrio (02/90–09/00)	10041 (280mm)	10041 (280mm)
Mini Cooper (02/90–09/00)	10041 (280mm)	10041 (280mm)
Mini Margrave (09/95–09/00)	10041 (280mm)	10041 (280mm)
Mini Retro Rally (09/94–09/96)	10041 (280mm)	10041 (280mm)
Serie 200 (10/89–03/00)	10048 (450mm)	10048 (450mm)
Serie 400 (04/90–03/00)	10050 (510mm)	10048 (450mm)
Serie 400 Tourer (90–00)	10050 (510mm)	10048 (450mm)
Serie 600 (04/93–09/00)	10052 (550mm)	10050 (510mm)
Serie 800 (10/91–09/99)	10050 (510mm)	10049 (480mm)
Streetwise (09/03–12/05)	10048 (450mm)	10048 (450mm)

SAAB	L	P
900 (09/93–10/98)	10051 (530mm)	10050 (510mm)
9000 (09/92–12/98)	10051 (530mm)	10050 (510mm)
9-3 (03/98–09/02)	10051 (530mm)	10050 (510mm)
9-3 (09/02–)	10053 (580mm)	10053 (580mm)
9-3 (02/08–)	10054 (610mm)	10053 (580mm)
9-3 Cabriolet (03/98–08/03)	10051 (530mm)	10050 (510mm)
9-3 Cabriolet (08/03–)	10053 (580mm)	10053 (580mm)
9-3 Cabriolet (02/08–)	10054 (610mm)	10053 (580mm)
9-3 Coupe (03/98–08/03)	10051 (530mm)	10050 (510mm)
9-3 Kombi (03/05–)	10053 (580mm)	10053 (580mm)
9-3 Kombi (02/08–)	10054 (610mm)	10053 (580mm)
9-5 (06/97–)	10053 (580mm)	10053 (580mm)
9-5 (08/07–)	10054 (610mm)	10052 (550mm)
9-5 Kombi (06/97–)	10053 (580mm)	10053 (580mm)
9-5 Kombi (08/07–)	10054 (610mm)	10052 (550mm)

SEAT	L	P
Alhambra (07/01–)	10056 (710mm)	10056 (710mm)
Altea (03/04–)	10054 (610mm)	10054 (610mm)
Altea XL (10/06–)	10054 (610mm)	10054 (610mm)
Arosa (02/97–02/99)	10049 (480mm)	10049 (480mm)
Arosa (03/99–06/04)	10051 (530mm)	10049 (480mm)
Cordoba (09/93–12/02)	10051 (530mm)	10049 (480mm)
Cordoba (09/02–04/06)	10051 (530mm)	10048 (450mm)
Cordoba (05/06–)	10051 (530mm)	10049 (480mm)
Cordoba Vario (07/96–12/02)	10051 (530mm)	10049 (480mm)
Exeo (12/08–)	10052 (550mm)	10052 (550mm)
Exeo ST (08/09–)	10052 (550mm)	10052 (550mm)
Ibiza (03/93–05/02)	10051 (530mm)	10049 (480mm)
Ibiza (09/01–02/06)	10051 (530mm)	10049 (480mm)
Ibiza (02/06–)	10051 (530mm)	10049 (480mm)
Ibiza (02/08–)	10054 (610mm)	10046 (410mm)
Ibiza Sportcoupe (02/08–)	10054 (610mm)	10046 (410mm)
Inca (11/95–06/03)	10050 (510mm)	10048 (450mm)
Leon (10/98–06/06)	10051 (530mm)	10049 (480mm)
Leon (07/05–)	10055 (660mm)	10055 (660mm)
Marbella (01/87–05/98)	10046 (410mm)	
Terra (01/87–12/94)	10046 (410mm)	
Toledo (05/91–03/99)	10050 (510mm)	10049 (480mm)
Toledo (04/99–07/04)	10051 (530mm)	10049 (480mm)
Toledo (09/04–)	10055 (660mm)	10055 (660mm)

SMART (MMC)	L	P
Forfour (01/04–06/07)	10055 (660mm)	10048 (450mm)
Fortwo Cabrio (02/04–03/07)	10051 (530mm)	10051 (530mm)
Fortwo Cabrio (04/07–)	10054 (610mm)	10052 (550mm)
Fortwo Coupe (02/04–03/07)	10051 (530mm)	10051 (530mm)
Fortwo Coupe (04/07–)	10054 (610mm)	10052 (550mm)
Roadster (04/03–11/05)	10050 (510mm)	10048 (450mm)
Roadster Coupe (03–05)	10050 (510mm)	10048 (450mm)
Smart Cabrio (03/00–01/04)	10051 (530mm)	10051 (530mm)
Smart Coupe (07/98–01/04)	10051 (530mm)	10051 (530mm)

SSANGYONG	L	P
Actyon (03/07–)	10051 (530mm)	10049 (480mm)
Actyon Sports (03/07–)	10051 (530mm)	10049 (480mm)
Chairman (10/97–09/03)	10054 (610mm)	
Chairman New (09/03–01/08)	10054 (610mm)	
Korando (07/96–12/05)	10048 (450mm)	10048 (450mm)
Kyron (09/05–)	10052 (550mm)	10049 (480mm)
Musso (07/93–12/05)	10050 (510mm)	10048 (450mm)
Rexton (09/02–)	10050 (510mm)	10049 (480mm)
Rodius (08/04–)	10054 (610mm)	10048 (450mm)

SUBARU	L	P
Forester (01/97–11/07)	10051 (530mm)	10049 (480mm)
Forester (12/07–)	10054 (610mm)	10048 (450mm)
Impreza (01/93–09/00)	10051 (530mm)	10048 (450mm)
Impreza Hatchb. (06/07–)	10054 (610mm)	10046 (410mm)
Impreza Kombi (00–07)	10052 (550mm)	10046 (410mm)
Impreza Outback (00–07)	10052 (550mm)	10046 (410mm)
Impreza Sedan (00–07)	10052 (550mm)	10046 (410mm)
Justy (05/87–10/95)	10048 (450mm)	10048 (450mm)
Justy (10/95–09/96)	10051 (530mm)	10048 (450mm)
Justy (10/96–)	10051 (530mm)	10048 (450mm)
Justy (09/03–)	10049 (480mm)	10047 (430mm)
Legacy (07/03–)	10054 (610mm)	10048 (450mm)
Legacy Kombi (94–98)	10051 (530mm)	10049 (480mm)
Legacy Kombi (98–03)	10052 (550mm)	10050 (510mm)
Legacy Kombi (03–)	10054 (610mm)	10048 (450mm)
Legacy Outback (96–99)	10051 (530mm)	10049 (480mm)
Legacy Outback (98–03)	10052 (550mm)	10050 (510mm)
Legacy Outback (03–)	10054 (610mm)	10048 (450mm)
Legacy Sedan (94–98)	10051 (530mm)	10049 (480mm)
Legacy Sedan (98–03)	10052 (550mm)	10050 (510mm)
SVX (09/92–12/96)	10052 (550mm)	10050 (510mm)
Tribeca (10/06–)	10055 (660mm)	10050 (510mm)

SUZUKI	L	P
Alto (02/02–12/06)	10048 (450mm)	10046 (410mm)
Alto (01/09–)	10052 (550mm)	10043 (330mm)
Alto Hatchb. (10/94–02/02)	10049 (480mm)	10047 (430mm)
Baleno Hatchb. (04/95–09/05)	10050 (510mm)	10048 (450mm)
Baleno Sedan (04/95–09/05)	10050 (510mm)	10048 (450mm)
Baleno Wagon (08/96–09/07)	10050 (510mm)	10048 (450mm)
Carry (10/94–03/99)	10043 (330mm)	10043 (330mm)
Carry (03/99–03/09)	10046 (410mm)	10046 (410mm)
Carry Van (10/94–03/99)	10043 (330mm)	10043 (330mm)
Grand Vitar (03/98–)	10049 (480mm)	10049 (480mm)
Ignis Hatchb. (10/00–12/07)	10048 (450mm)	10048 (450mm)
Jimny (10/98–10/08)	10046 (410mm)	10046 (410mm)
Liana Hatchb. (03/01–12/07)	10052 (550mm)	10049 (480mm)
Liana Sedan (04/02–12/07)	10052 (550mm)	10049 (48

Stěrač FLAT MULTI

Orientační tabulka typů aut s odpovídající délkou originálních stěračů

TABULKA POUŽITÍ

ŠKODA	L	P
105-120, 130, 110R (76-86)	10046 (410mm)	10046 (410mm)
Fabia I Hatchback (6Y2) (09/99-03/08)	10051 (530mm)	10049 (480mm)
Fabia I Combi (6Y5) (12/99-12/07)	10051 (530mm)	10049 (480mm)
Fabia I Sedan (6Y3) (09/99-12/07)	10051 (530mm)	10049 (480mm)
Fabia II Hatchback (5J2) (12/06-)	10051 (530mm)	10051 (530mm)
Fabia II Combi (5J5) (12/06-)	10051 (530mm)	10051 (530mm)
Favorit (09/88-09/94)	10048 (450mm)	10048 (450mm)
Favorit (09/94-12/98)	10050 (510mm)	10050 (510mm)
Felicia (10/94-08/01)	10050 (510mm)	10050 (510mm)
Felicia Combi (10/94-08/01)	10050 (510mm)	10050 (510mm)
Forman (10/90-12/95)	10050 (510mm)	10050 (510mm)
Octavia I (1U2) (09/96-)	10051 (530mm)	10049 (480mm)
Octavia I Combi (1U5) (10/96-)	10051 (530mm)	10049 (480mm)
Octavia II (1Z3) (05/04-)	10054 (610mm)	10049 (480mm)
Octavia II Combi (1Z5) (05/04-)	10054 (610mm)	10049 (480mm)
Praktik (03/07-)	10051 (530mm)	10051 (530mm)
Roomster (5J7) (03/06-)	10051 (530mm)	10051 (530mm)
Superb I (3U4) (12/01-10/04)	10051 (530mm)	10051 (530mm)
Superb I (3U4) (11/04-03/08)	10051 (530mm)	10050 (510mm)
Superb II (3T4) (03/08-)	10054 (610mm)	10048 (450mm)
Superb II Combi (3T) (10/09-)	10054 (610mm)	10048 (450mm)
Yeti (5L) (05/09-)	10054 (610mm)	10049 (480mm)

TATRA	L	P
613 (75-96)	10046 (410mm)	10046 (410mm)

TOYOTA	L	P
4-Runner (08/89-11/95)	10046 (410mm)	10046 (410mm)
Auris (10/06-)	10055 (660mm)	10046 (410mm)
Avenis (10/97-01/03)	10051 (530mm)	10048 (450mm)
Avenis (01/03-)	10054 (610mm)	10046 (410mm)
Avenis Liftback (97-03)	10051 (530mm)	10048 (450mm)
Avenis Liftback (01/03-)	10054 (610mm)	10046 (410mm)
Avenis Verso (05/01-)	10055 (660mm)	10046 (410mm)
Avenis Wagon (97-03)	10051 (530mm)	10048 (450mm)
Avenis Wagon (01/03-)	10054 (610mm)	10046 (410mm)
Aygo (02/05-)	10055 (660mm)	
Camry (06/91-08/01)	10051 (530mm)	10048 (450mm)
Camry (08/01-01/06)	10055 (660mm)	10048 (450mm)
Camry Wagon (06/91-08/96)	10051 (530mm)	10048 (450mm)
Carina E Liftback (92-97)	10051 (530mm)	10048 (450mm)
Carina E Sedan (92-97)	10051 (530mm)	10048 (450mm)
Carina E Wagon (92-97)	10051 (530mm)	10048 (450mm)
Celica (08/99-09/05)	10055 (660mm)	10046 (410mm)
Celica Cabrio (08/94-05/99)	10051 (530mm)	10049 (480mm)
Celica Liftback (11/93-08/99)	10051 (530mm)	10049 (480mm)
Conquest (11/98-)	10048 (450mm)	10048 (450mm)
Corolla (05/92-09/01)	10050 (510mm)	10048 (450mm)
Corolla (08/00-)	10052 (550mm)	10049 (480mm)
Corolla Hatchback (11/01-)	10052 (550mm)	10049 (480mm)
Corolla Liftback (92-01)	10050 (510mm)	10048 (450mm)
Corolla Sedan (92-01)	10050 (510mm)	10048 (450mm)
Corolla Verso (09/01-)	10055 (660mm)	10046 (410mm)
Corolla Wagon (92-01)	10050 (510mm)	10048 (450mm)
Corolla Wagon (08/00-)	10054 (610mm)	10046 (410mm)
Cressida Sedan (88-96)	10046 (410mm)	10046 (410mm)
Crown (09/87-10/95)	10050 (510mm)	10048 (450mm)
Echo (09/99-)	10051 (530mm)	10045 (380mm)
Hiace (08/95-12/95)	10050 (510mm)	10048 (450mm)
Hiace (01/96-08/01)	10051 (530mm)	10051 (530mm)
Hiace (08/01-)	10051 (530mm)	10051 (530mm)
Hiace Grandia (06/04-)	10051 (530mm)	10049 (480mm)
Hiace Van (08/89-12/95)	10050 (510mm)	10048 (450mm)
Hiace Van (08/96-08/01)	10051 (530mm)	10051 (530mm)
Hiace Wagon (08/89-12/95)	10050 (510mm)	10048 (450mm)
Hilux (08/88-07/98)	10047 (430mm)	10047 (430mm)
Hilux (01/98-12/02)	10048 (450mm)	10048 (450mm)
Hilux (06/05-)	10051 (530mm)	10049 (480mm)
Hilux Pickup (08/88-08/05)	10047 (430mm)	10047 (430mm)

pokračování ➔

TOYOTA	L	P
☛ pokračování		
Hilux Surf (08/04-)	10051 (530mm)	10048 (450mm)
iQ (11/08-)	10051 (530mm)	10048 (450mm)
Land Cruiser (11/84-08/99)	10046 (410mm)	10046 (410mm)
Land Cruiser (01/90-01/98)	10048 (450mm)	10048 (450mm)
Land Cruiser (03/98-)	10046 (410mm)	10046 (410mm)
Land Cruiser (09/02-)	10052 (550mm)	10051 (530mm)
Land Cruiser (09/07-)	10054 (610mm)	10051 (530mm)
MR2 Cabrio (12/89-01/95)	10050 (510mm)	10048 (450mm)
MR2 Cabrio (12/99-08/05)	10050 (510mm)	10049 (480mm)
Paseo (08/95-07/99)	10050 (510mm)	10048 (450mm)
Picnic (09/96-05/01)	10054 (610mm)	10046 (410mm)
Prius (12/97-08/03)	10054 (610mm)	10046 (410mm)
Prius (09/03-)	10055 (660mm)	10046 (410mm)
RAV4 (04/94-08/00)	10050 (510mm)	10048 (450mm)
RAV4 (05/00-11/05)	10054 (610mm)	10049 (480mm)
RAV4 (11/05-)	10053 (580mm)	10046 (410mm)
RAV4 Cabrio (12/97-08/00)	10050 (510mm)	10048 (450mm)
Starlet (12/89-01/96)	10050 (510mm)	10048 (450mm)
Starlet (01/96-07/99)	10050 (510mm)	10048 (450mm)
Supra (05/93-05/96)	10051 (530mm)	10050 (510mm)
Urban Cruiser (01/09-)	10054 (610mm)	10044 (350mm)
Venture (11/91-05/00)	10048 (450mm)	10048 (450mm)
Verso (02/09-)	10055 (660mm)	10046 (410mm)
Yaris (01/99-08/05)	10051 (530mm)	10045 (380mm)
Yaris (08/05-)	10054 (610mm)	10044 (350mm)
Yaris Verso (08/99-09/05)	10052 (550mm)	10046 (410mm)

TRABANT	L	P
600, 601 (70-)	10046 (410mm)	10046 (410mm)

UAZ	L	P
Hunter (01/08-)	10051 (530mm)	10051 (530mm)
Patriot (09/05-)	10051 (530mm)	10051 (530mm)
Pickup (06/08-)	10051 (530mm)	10051 (530mm)

VOLKSWAGEN	L	P
Bora (09/98-05/02)	10051 (530mm)	10049 (480mm)
Bora (06/02-05/05)	10051 (530mm)	10049 (480mm)
Bora Variant (09/98-05/02)	10051 (530mm)	10049 (480mm)
Bora Variant (06/02-05/05)	10051 (530mm)	10049 (480mm)
Caddy (11/95-06/03)	10051 (530mm)	10048 (450mm)
Caddy (02/04-10/06)	10054 (610mm)	10048 (450mm)
Caddy (11/06-)	10054 (610mm)	10048 (450mm)
Caddy Pickup (06/96-12/00)	10051 (530mm)	10048 (450mm)
Corrado (08/91-07/95)	10049 (480mm)	10049 (480mm)
Crafter 30 (04/06-)	10055 (660mm)	10054 (610mm)
Crafter 35 (04/06-)	10055 (660mm)	10054 (610mm)
Crafter 50 (04/06-)	10055 (660mm)	10054 (610mm)
Eos (05/06-)	10054 (610mm)	10049 (480mm)
Eurovan (10/92-05/00)	10051 (530mm)	10051 (530mm)
Fox (04/05-)	10051 (530mm)	10045 (380mm)
Golf II (11/91-12/99)	10048 (450mm)	10048 (450mm)
Golf III (11/91-12/99)	10051 (530mm)	10049 (480mm)
Golf III Cabrio (09/93-04/98)	10051 (530mm)	10049 (480mm)
Golf III Variant (07/93-02/99)	10051 (530mm)	10049 (480mm)
Golf IV (10/97-05/02)	10051 (530mm)	10049 (480mm)
Golf IV (06/02-06/05)	10051 (530mm)	10049 (480mm)
Golf IV Cabrio (04/98-06/02)	10051 (530mm)	10049 (480mm)
Golf IV Variant (05/99-05/02)	10051 (530mm)	10049 (480mm)
Golf IV Variant (06/02-06/05)	10051 (530mm)	10049 (480mm)
Golf Plus (01/05-01/09)	10056 (710mm)	10056 (710mm)
Golf V (10/03-10/05)	10054 (610mm)	10049 (480mm)
Golf V (11/05-11/08)	10054 (610mm)	10049 (480mm)
Golf V Variant (05/07-)	10054 (610mm)	10049 (480mm)
Golf VI (10/08-)	10054 (610mm)	10049 (480mm)
Jetta (10/92-)	10051 (530mm)	10049 (480mm)
Jetta (01/05-11/05)	10054 (610mm)	10049 (480mm)
Jetta (12/05-)	10054 (610mm)	10049 (480mm)
Jetta III (11/92-12/99)	10051 (530mm)	10049 (480mm)
LT (10/88-04/96)	10048 (450mm)	
LT (05/96-04/06)	10054 (610mm)	10051 (530mm)
Lupo (06/98-07/05)	10051 (530mm)	10049 (480mm)
Multivan T4 (-03)	10051 (530mm)	10051 (530mm)
Multivan T5 (02-)	10054 (610mm)	10054 (610mm)


pokračování ➔

VOLKSWAGEN	L	P
☛ pokračování		
New Beetle (01/98-)	10051 (530mm)	10051 (530mm)
New Beetle Cabrio (01/03-)	10051 (530mm)	10051 (530mm)
Passat (03/90-10/02)	10051 (530mm)	10051 (530mm)
Passat (11/01-05/05)	10051 (530mm)	10051 (530mm)
Passat (03/05-)	10054 (610mm)	10049 (480mm)
Passat CC (05/08-)	10054 (610mm)	10049 (480mm)
Passat Variant (03/90-10/01)	10051 (530mm)	10051 (530mm)
Passat Variant (11/01-05/05)	10051 (530mm)	10051 (530mm)
Passat Variant (08/05-)	10054 (610mm)	10049 (480mm)
Polo (10/90-09/94)	10046 (410mm)	10046 (410mm)
Polo (10/94-09/01)	10049 (480mm)	10049 (480mm)
Polo (09/01-05/05)	10051 (530mm)	10049 (480mm)
Polo (07/03-)	10051 (530mm)	10049 (480mm)
Polo (05/05-)	10051 (530mm)	10049 (480mm)
Polo Classic (10/90-09/94)	10046 (410mm)	10046 (410mm)
Polo Classic (12/94-10/03)	10050 (510mm)	10048 (450mm)
Polo Coupe (10/90-09/94)	10046 (410mm)	10046 (410mm)
Polo Playa (10/98-10/02)	10050 (510mm)	10048 (450mm)
Polo Variant (05/97-09/01)	10051 (530mm)	10048 (450mm)
Scirocco (08/08-)	10054 (610mm)	10049 (480mm)
Sharan (06/01-)	10056 (710mm)	10056 (710mm)
Taro (04/89-03/97)	10047 (430mm)	10047 (430mm)
Tiguan (11/07-)	10054 (610mm)	10050 (510mm)
Touareg (11/02-11/06)	10055 (660mm)	10055 (660mm)
Touareg (12/06-)	10055 (660mm)	10055 (660mm)
Touran (02/03-11/06)	10054 (610mm)	10048 (450mm)
Touran (11/06-)	10054 (610mm)	10048 (450mm)
Transporter T4 (09/90-06/03)	10051 (530mm)	10051 (530mm)
Transporter T5 (02/03-)	10054 (610mm)	10054 (610mm)
Vento (11/91-12/97)	10051 (530mm)	10049 (480mm)


VOLVO	L	P
440 (09/88-07/97)	10051 (530mm)	10051 (530mm)
460 (03/90-07/97)	10051 (530mm)	10051 (530mm)
480 (08/88-12/96)	10051 (530mm)	10051 (530mm)
740 (08/88-07/95)	10050 (510mm)	10049 (480mm)
850 (09/91-07/98)	10051 (530mm)	10051 (530mm)
850 Kombi (09/91-07/98)	10051 (530mm)	10051 (530mm)
940 (09/90-10/98)	10050 (510mm)	10049 (480mm)
960 (08/90-07/98)	10051 (530mm)	10051 (530mm)
C30 (10/06-)	10055 (660mm)	10050 (510mm)
C70 Cabrio (02/98-03/06)	10051 (530mm)	10051 (530mm)
C70 Coupe (01/97-07/02)	10051 (530mm)	10051 (530mm)
C70 II Cabrio (03/06-)	10055 (660mm)	10049 (480mm)
S40 II (12/03-07/05)	10055 (660mm)	10050 (510mm)
S40 II (08/05-)	10055 (660mm)	10050 (510mm)
S40 I (09/95-01/04)	10051 (530mm)	10050 (510mm)
S60 (11/00-07/04)	10054 (610mm)	10051 (530mm)
S60 (08/04-)	10054 (610mm)	10051 (530mm)
S70 (01/97-07/00)	10051 (530mm)	10051 (530mm)
S80 I (06/98-07/04)	10054 (610mm)	10051 (530mm)
S80 I (03/04-07/06)	10054 (610mm)	10051 (530mm)
S80 II (03/06-)	10055 (660mm)	10050 (510mm)
S90 (01/97-05/98)	10051 (530mm)	10051 (530mm)
V40 (01/95-06/04)	10050 (510mm)	10049 (480mm)
V50 (04/04-07/05)	10055 (660mm)	10050 (510mm)
V50 (08/05-)	10055 (660mm)	10050 (510mm)
V70 I (01/97-03/00)	10051 (530mm)	10051 (530mm)
V70 II (03/00-07/04)	10054 (610mm)	10051 (530mm)
V70 II (08/04-07/07)	10054 (610mm)	10051 (530mm)
V70 III (08/07-)	10055 (660mm)	10050 (510mm)
V90 (01/97-07/98)	10051 (530mm)	10051 (530mm)
XC60 (03/09-)	10055 (660mm)	10050 (510mm)
XC70 I (08/02-07/04)	10054 (610mm)	10051 (530mm)
XC70 I (08/04-07/07)	10054 (610mm)	10051 (530mm)
XC70 II (08/07-)	10055 (660mm)	10050 (510mm)
XC90 (10/02-07/04)	10054 (610mm)	10051 (530mm)
XC90 (08/04-)	10054 (610mm)	10051 (530mm)

WARTBURG	L	P
353 (70-)	10046 (410mm)	10046 (410mm)

ZAZ	L	P
Tavrie (91-)	10050 (510mm)	10050 (510mm)

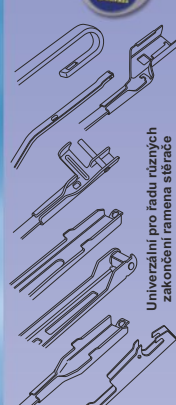

Univerzální pro řadu různých zakončení ramena stěrače

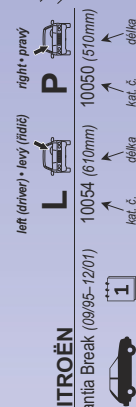

In 1999 Certified Germany TUV ISO9002

